

Integrated Control Electronics

- **General Documents**

- [High-Level Overview](#)
- [Enclosure Specifications](#)
- [Event System Guide](#)
- [PCB Mechanical Specifications](#)
- [OEM Integration Guide](#)

- **Module Specifications**

- [Master Board](#)
- [Quad Temperature Controller](#)
- [Current Controller & Peak Lock Servo](#)
- [Current Controller & Offset Phase Lock Servo](#)

- **Full Command List**

- [Overview of Commands and Basic Usage](#)
- [Master Board](#)
- [Common Commands to all Slave Boards](#)
- [Common Laser Current Controller Commands](#)
- [Quad Temperature Controller](#)
- [Current Controller & Peak Lock Servo](#)
- [Current Controller & Offset Phase Lock Servo](#)

- **Software**

- [Python-based GUI for controlling ICE](#) (hosted on GitHub)
- [Example GUI Software](#) (Windows x64 only and obsolete)

From:

<https://www.vescent.com/manuals/> - **Product Manuals**

Permanent link:

<https://www.vescent.com/manuals/doku.php?id=ice&rev=1415404942>

Last update: **2021/08/26 14:26**

