

Phase?

Arguments: **Description**

No Arguments Taken

Example:

Phase?
58

I₂C Command Number: 32

Returns the phase shift (in degrees) on the dither signal modulating the laser current.</div>

Phase

Description

Arguments:

[Float] PHASE

Example:

Phase 23
22.5

I₂C Command Number: 33

Sets the phase shift to PHASE (in degrees) on the dither signal modulating the laser current. Returns the output of the command **Phase?** </div>

From:

<https://www.vescent.com/manuals/> - **Product Manuals**

Permanent link:

<https://www.vescent.com/manuals/doku.php?id=test>

Last update: **2021/08/26 14:26**

