



* Note: to turn off integrator the low freq. switch must be set to "OFF" and the high freq. switch must be set to "low freq."

